

Installing Your New Tiller Head

Tools Needed:

- 3/32 Allen wrench
- File
- Locktite Thread Locker

BEFORE YOU START


The plastic spacer is intentionally long and needs to be slowly filed down to ensure a perfect fit. The goal is to eliminate fore and aft slop between the tiller head and the top pintle.



1. Place your Lido 14 Classic rudder in the lower pintle.

2. File the plastic spacer down to the point to where you can just push the bolt in the rudder head holes. The plastic spacer needs to fit tight against the top pintle. This will take a number of tries as you don't want to file the plastic spacer too short.

Note: Lifting up the tiller about a foot will make it easier to insert the bolt.

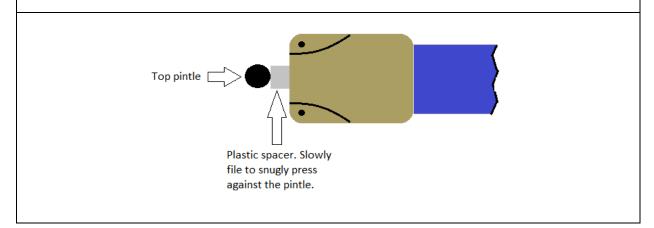



Enjoy sailing and winning races with your new Tiller Head!